

# BVARC R7 Vertical



## Assembly Notes:

- Assemble 3 sections
- Ensure all **measurements** are good
- Ensure all nuts/clamps are tight
- Put on HAT bars top and bottom
- Put on RADIALS
- Place vertical on mast /fasten
- Mast in tripod
- Fasten coax
- Tilt up and stabilize base

**TABLE 1**

40 Meter Setting For Dimension F

CW	CENTER	PHONE
28"	22"	17-1/8"
(71.1 cm)	(55.9 cm)	(43.5)

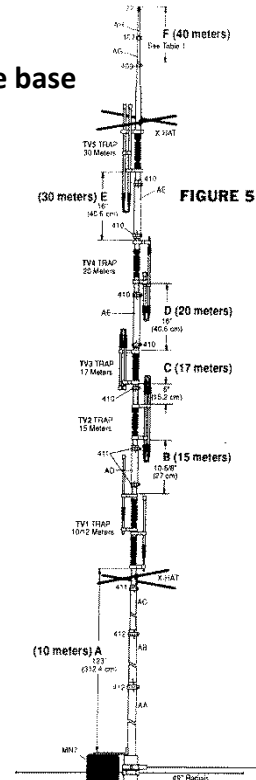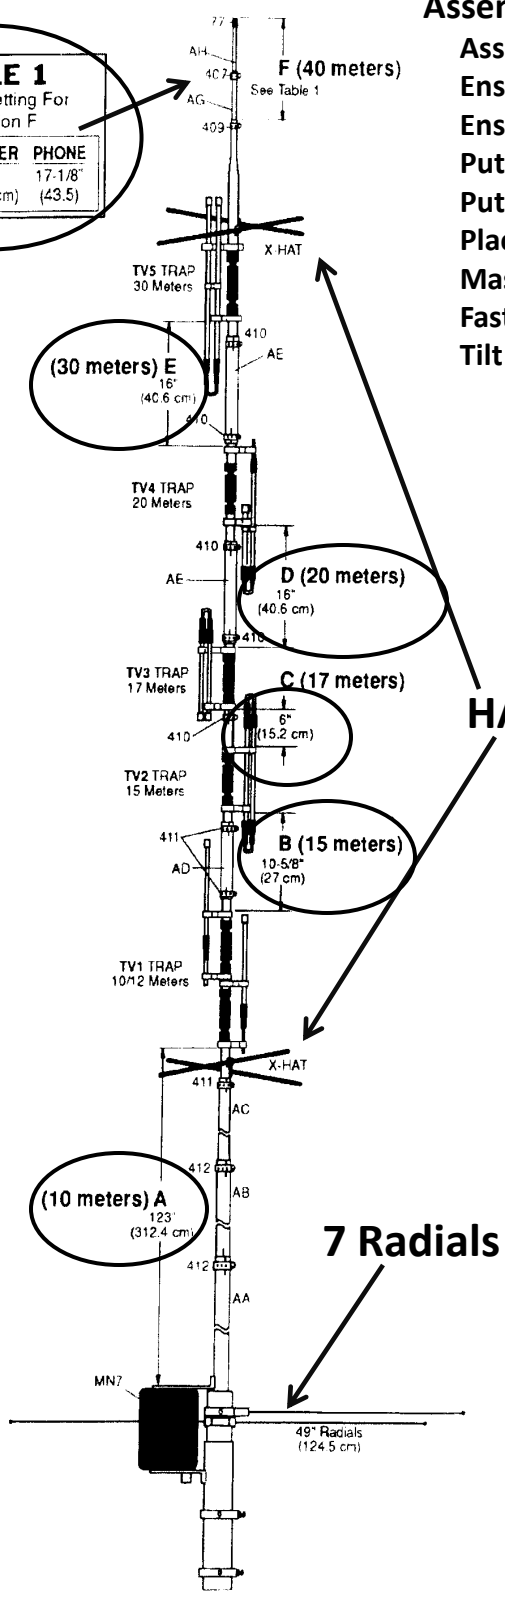

**R7  
VERTICAL**

10' Mast

100' Coax

TRIPOD

- R7 Kit includes:**
- 3 sections vertical
  - 7 radials and tool
  - 4 HAT bars
  - 10 foot mast
  - Tripod
  - 100 foot coax

**Note: Either guy the mast or weigh down the tripod**  
**The system is top heavy and WILL tip over**